

InFocus Video Card Guide for PC Laptop/Desktop Computers

How to configure your display settings for an InFocus projector

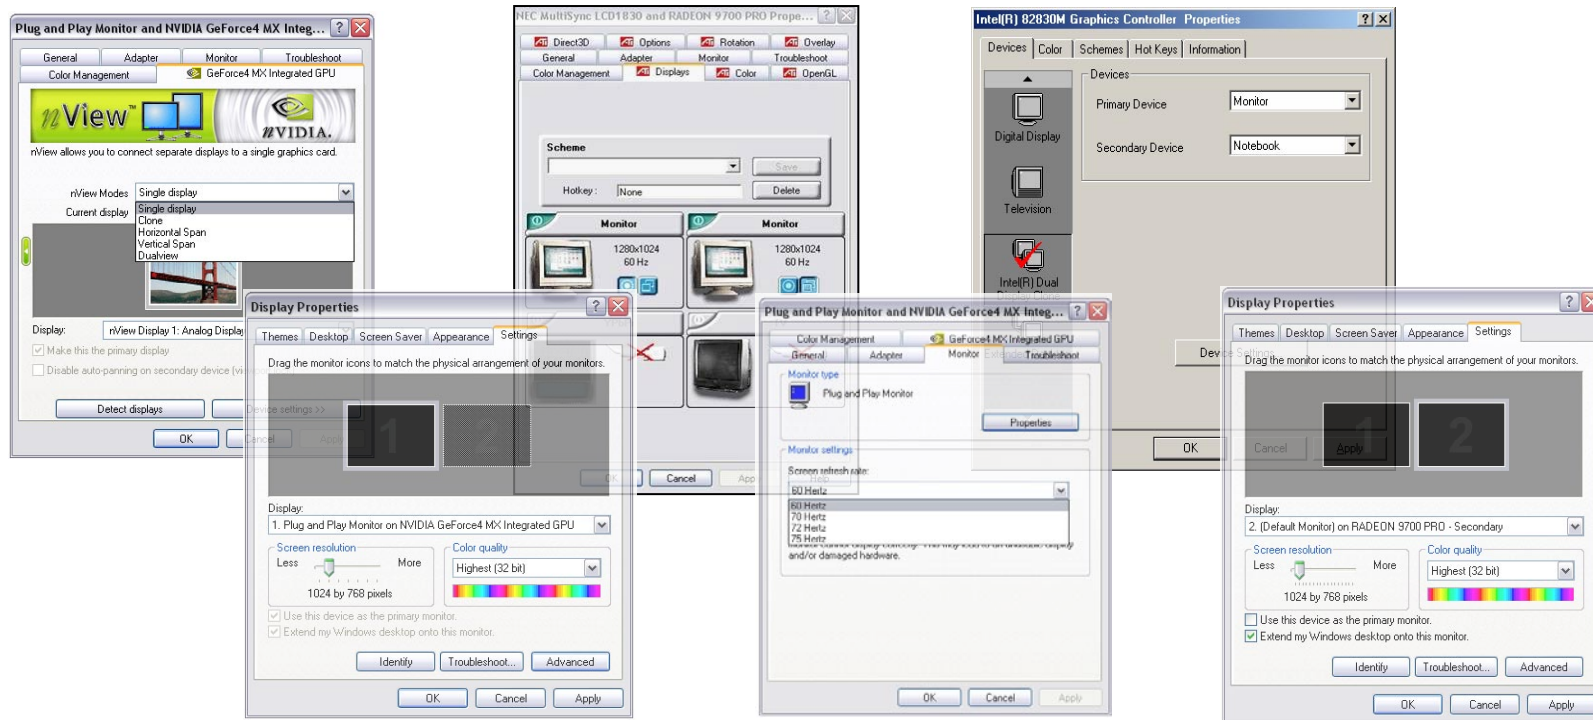


Table of Contents


- ATI** - If you have an ATI Radeon video card and a LAPTOP computer, see [page 2](#).
- ATI** - If you have an ATI Radeon video card and a DESKTOP computer, see [pages 3-4](#).
- NVIDIA** - If you have a NVIDIA GeForce video card and a LAPTOP computer, see [page 5](#).
- NVIDIA** - If you have a NVIDIA GeForce video card and a DESKTOP computer, see [pages 6-7](#).
- INTEL** - If you have an INTEL video card and a LAPTOP computer, see [page 8](#).

Most ATI video cards have dual monitor support. If you do not see the ATI Displays tab, download drivers from www.ati.com or the laptop manufacturer's web site.


NOTE: Single monitor support will allow you to display the laptop screen or an external display device.

Dual monitor support will allow you to display the laptop screen and an external display device simultaneously.


- 1** Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

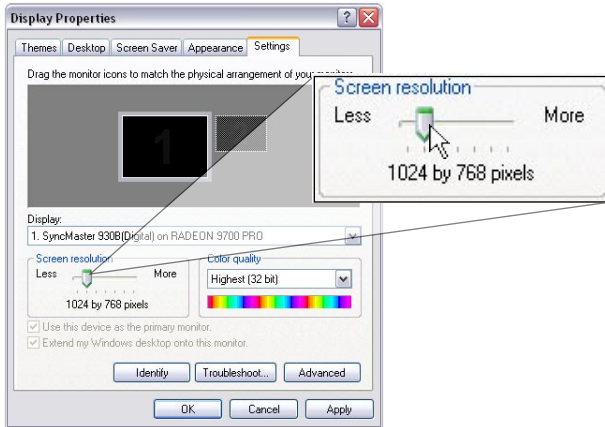

- 2** Click the Advanced button to view Advanced display properties.

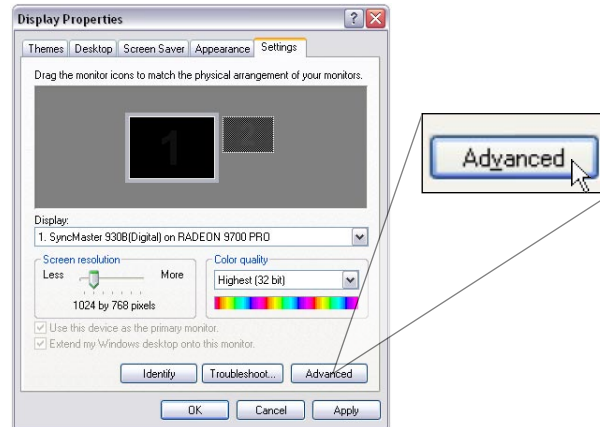

- 3** Click the ATI Displays Tab. To enable the second display, click enable/disable button in the right monitor box.

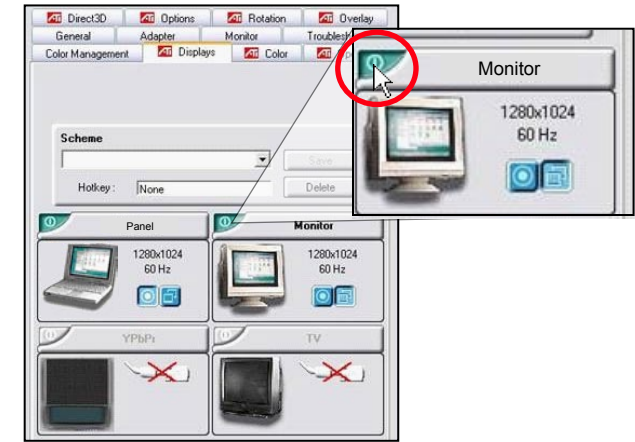


The right monitor (projector) is activated.

- 4** To set the desktop monitor (left) as Primary Display, click . To set the projector (right) as Secondary Display, click . Click Apply.




The desktop monitor (left) is set up as Primary Display and the projector (right) is set up as Secondary Display .

- 5** Click Yes to accept the changes.

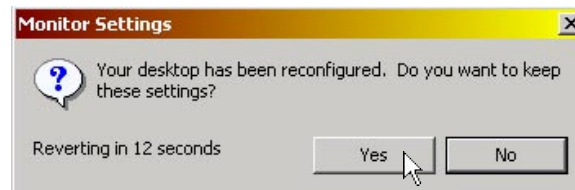

Note: If you do not click Yes or No, the settings will revert back to the previous settings.


- 6** The image appears on the laptop screen and the projector.

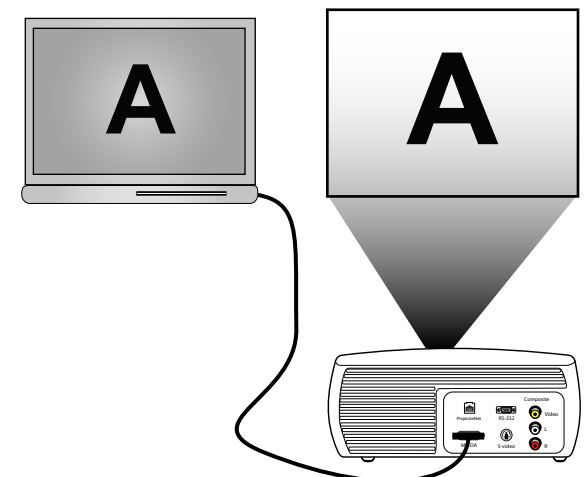

Some ATI video cards are single-head. If you do not see the ATI Displays tab, download drivers from www.ati.com or the laptop manufacturer's web site.


NOTE: Single head video cards have one monitor-out port to only support one display device at a time. Dual head video cards have two monitor-out ports to support two display devices simultaneously.

- Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

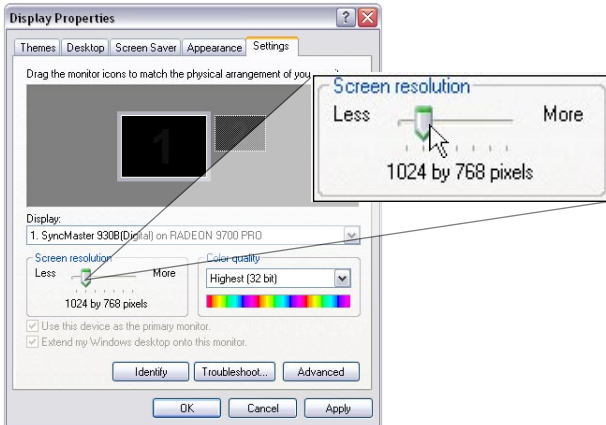


Note: Computer resolution higher than the native projector resolution may cause low image and text quality.

- Click the Advanced button to view Advanced display properties.

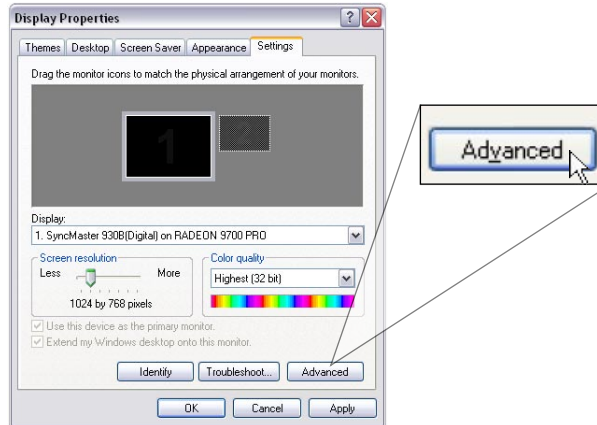

- Click the Monitor or Adapter tab to set the refresh rate to 60 Hertz. High refresh rates may cause flickering or no image on the projector.

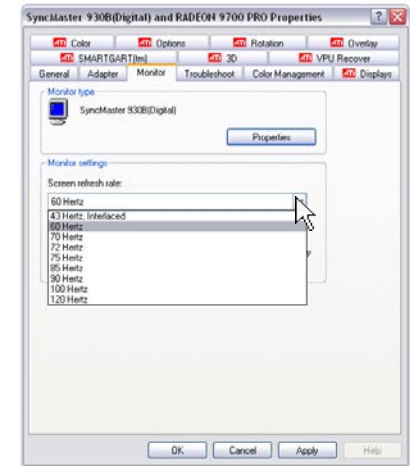


- Click Yes to accept the changes.




Note: If you do not click Yes or No, the settings will revert back to the previous settings.

- Turn off the computer. Disconnect your desktop monitor. Connect the computer to the projector.

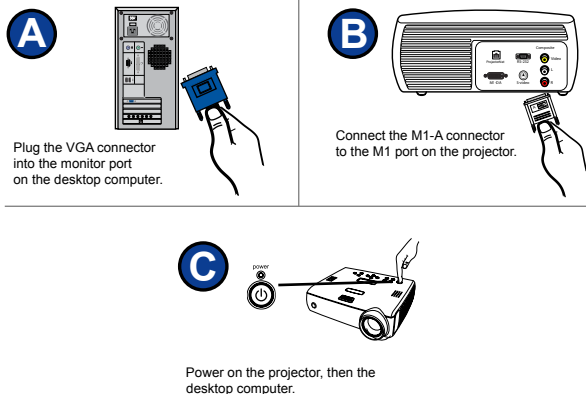


- The image appears on the projector. If you want to connect your monitor and projector to the desktop computer, see [PC Desktop How To Guide](#).

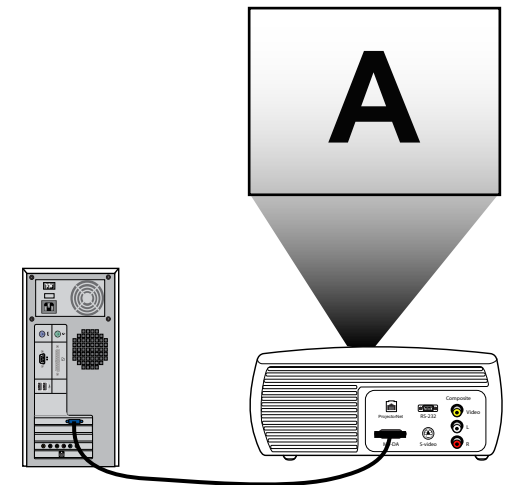

Most ATI video cards are dual-head. If you do not see the ATI Displays tab, download drivers from www.ati.com or the laptop manufacturer's web site.


NOTE: Single head video cards have one monitor-out port to only support one display device at a time.
Dual head video cards have two monitor-out ports to support two display devices simultaneously.

- 1** Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

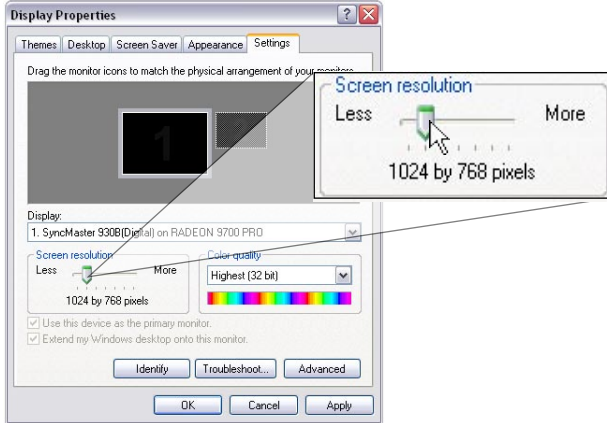


Note: Computer resolution higher than the native projector resolution may cause low image and text quality.

- 2** Click the Advanced button to view Advanced display properties.

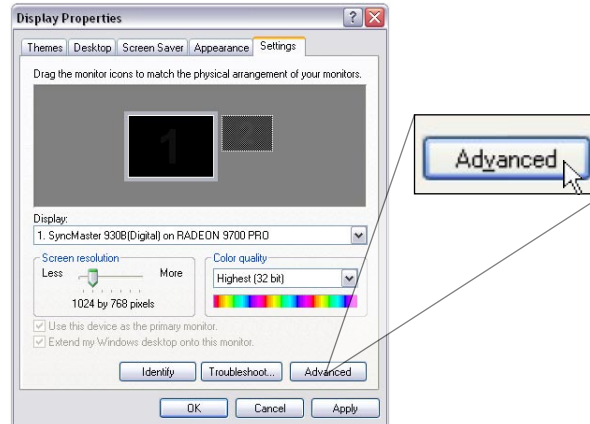

- 3** Click the ATI Displays Tab. To enable the second display, click enable/disable button on the right monitor box.

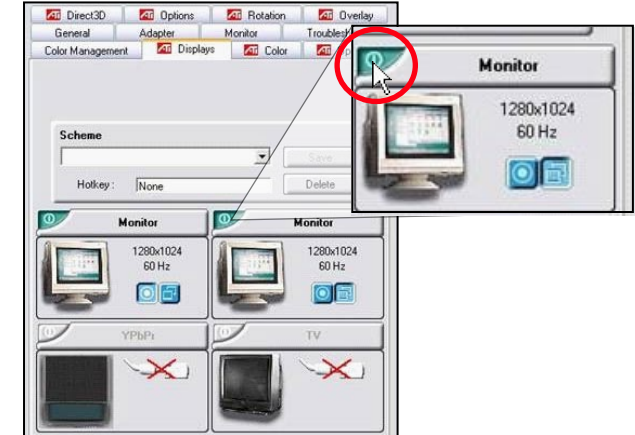


The right monitor (projector) is activated.

- 4** To set the desktop monitor (left) as Primary Display, click . To set the projector (right) as Secondary Display, click . Click Apply.




The desktop monitor (left) is set up as Primary Display and the projector (right) is set up as Secondary Display .

- 5** Click Yes to accept the changes.

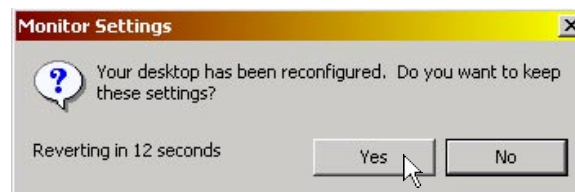


Note: If you do not click Yes or No, the settings will revert back to the previous settings.

- 6** The image appears on the monitor and the projector.

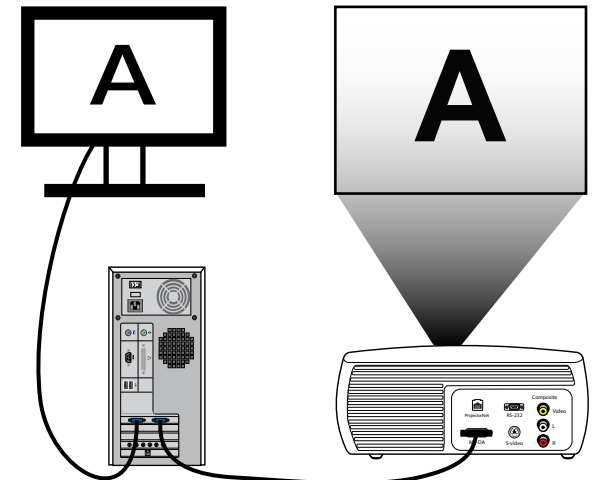


If you do not see the NVIDIA GeForce tab, download drivers from www.nvidia.com or the laptop manufacturer's web site.


- 1** Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

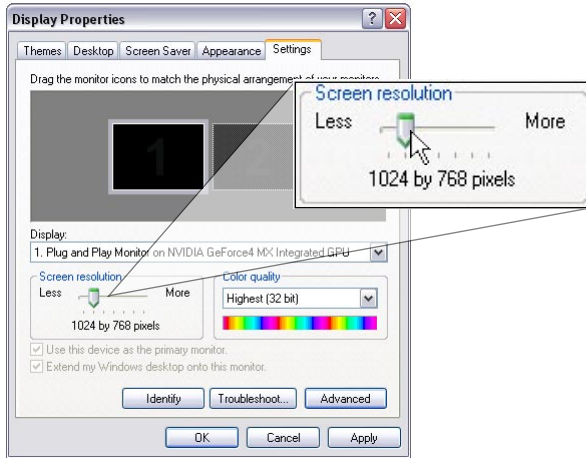


- 2** Click the Advanced button to view Advanced display properties.

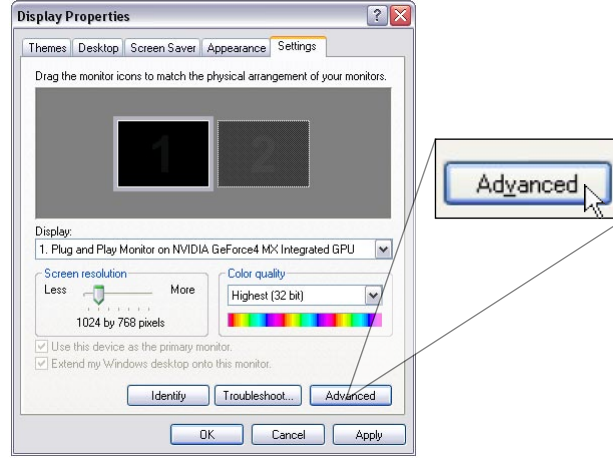

- 3** Click the NVIDIA tab. Click the green button to view the hidden NVIDIA display menu on the left.

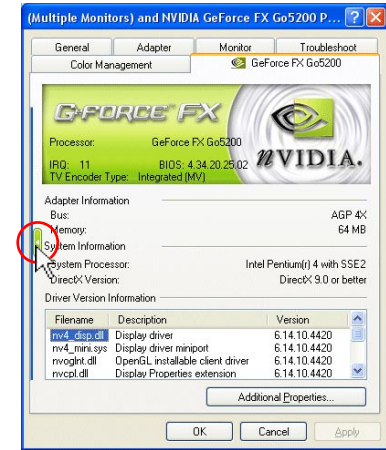

- 4** Click nView Display Mode in the NVIDIA Menu Panel. Under the nView Modes list, select Clone and click Apply.

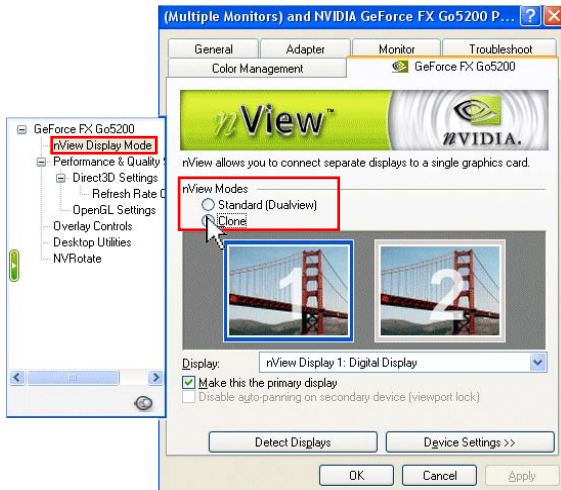


- 5** Click Yes to accept the changes..



Note: If you do not click Yes or No, the settings will revert back to the previous settings.


- 6** The image appears on the monitor and the projector.

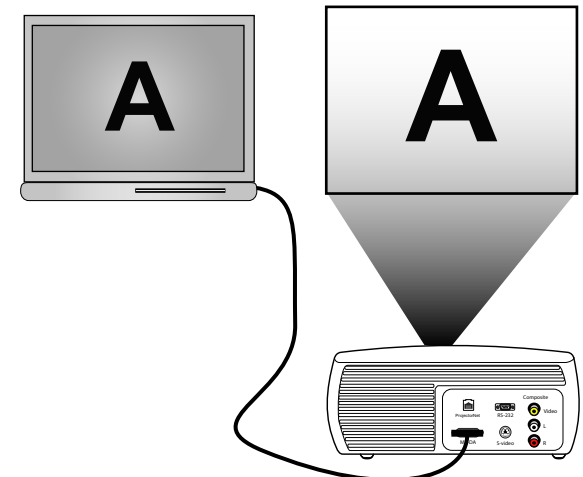


Some NVIDIA video cards are single-head. If you do not see the NVIDIA GeForce tab, download drivers from www.nvidia.com or the desktop manufacturer's web site.

NOTE: Single head video cards have one monitor-out port to only support one display device at a time. Dual head video cards have two monitor-out ports to support two display devices simultaneously.


- Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

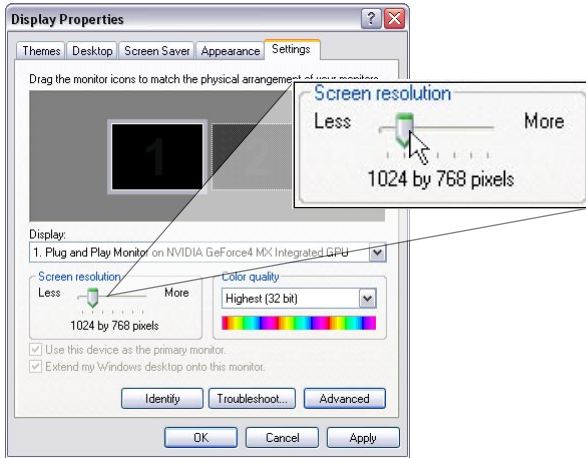


- Click the Advanced button to view Advanced display properties.

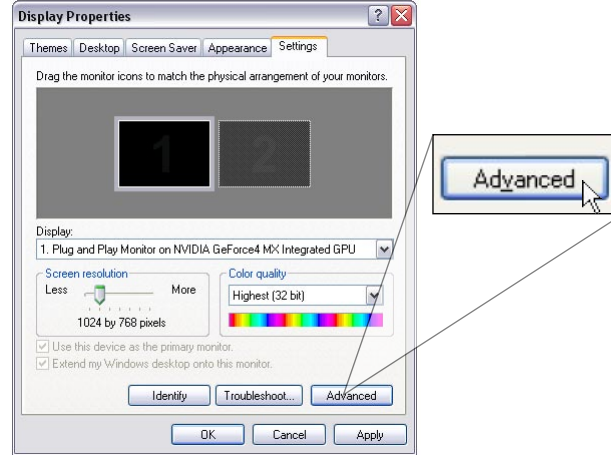

- Click the Monitor or Adapter tab to set the refresh rate to 60 Hertz. High refresh rates may cause flickering or no image on the projector.

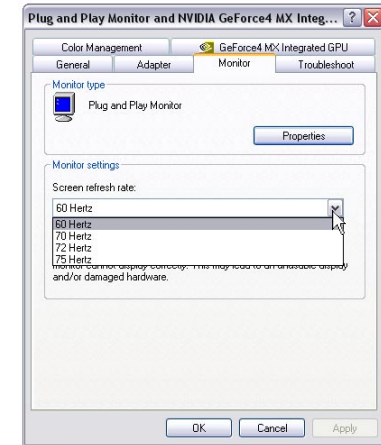


- Click Yes to accept the changes.

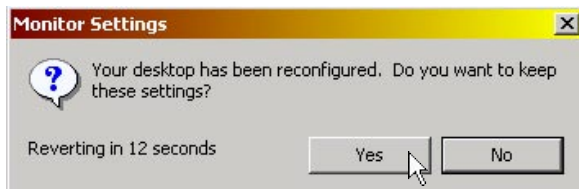


Note: If you do not click Yes or No, the settings will revert back to the previous settings.

- Turn off the computer. Disconnect your desktop monitor. Connect computer to the projector.

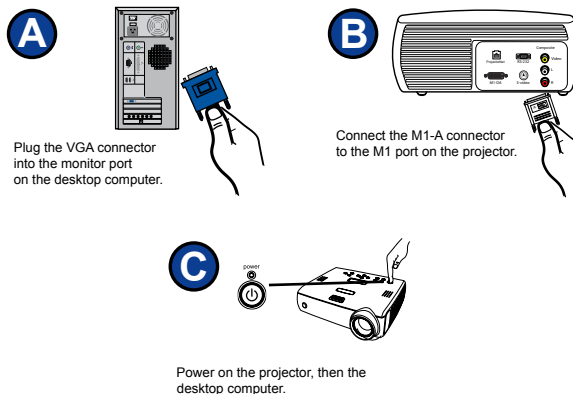


- The image appears on the projector. If you want to connect your monitor and projector to the desktop computer, then see [PC Desktop How To Guide](#).

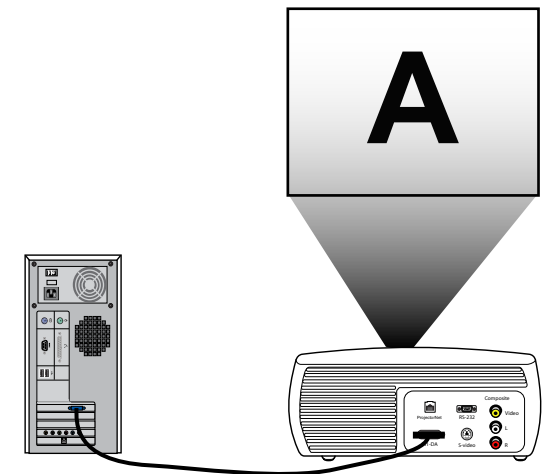


Most NVIDIA video cards are dual-head. If you do not see the NVIDIA GeForce tab, download drivers from www.nvidia.com or the video card manufacturer's web site.

NOTE: Single head video cards have one monitor-out port to only support one display device at a time.
Dual head video cards have two monitor-out ports to support two display devices simultaneously.


- 1** Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

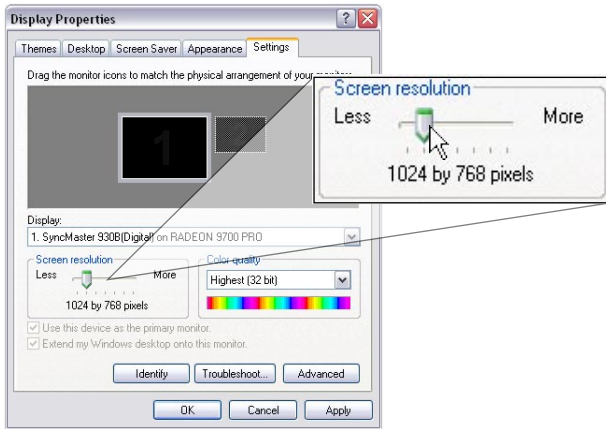


- 2** Click the Advanced button to view Advanced display properties.

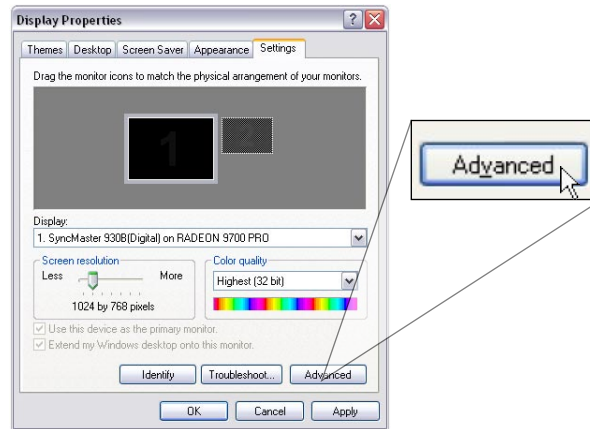

- 3** Click the NVIDIA tab. Click the green button to view the hidden NVIDIA display menu on the left.

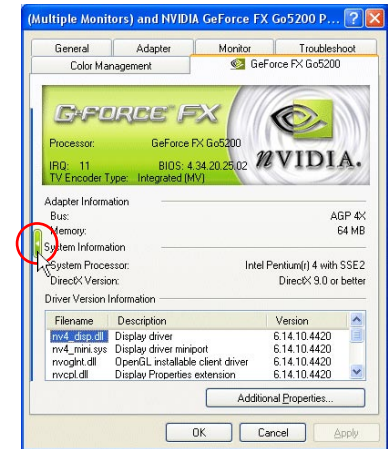

- 4** Click nView Display Mode in the NVIDIA Menu Panel. Under the nView Modes list, select Clone and click Apply.

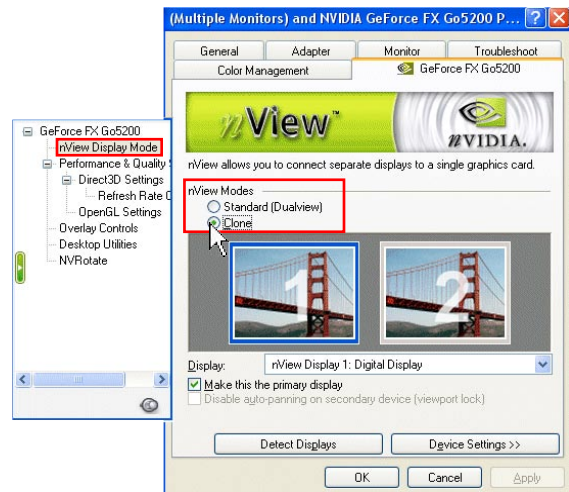


- 5** Click Yes to accept the changes.




Note: If you do not click Yes or No, the settings will revert back to the previous settings.

- 6** The image appears on the desktop monitor and the projector.

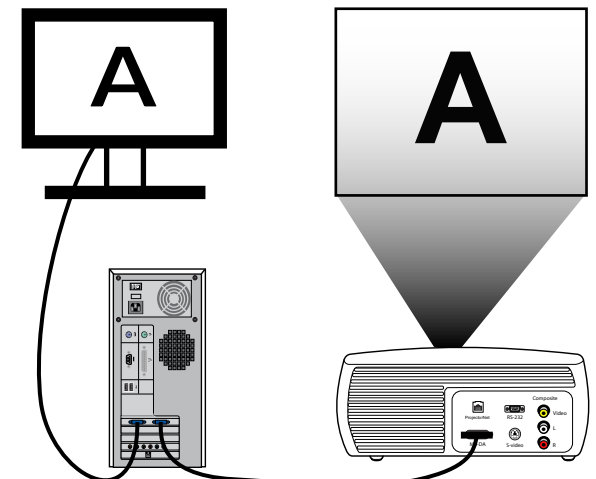


Some laptops have the Intel graphics controller. With the Intel Extreme Graphics drivers, you will be able to take advantage of the video card features such as dual monitor support. If you do not see the Intel Extreme Graphics tab, you can download the drivers from www.intel.com or the laptop manufacturer's web site.


- 1** Go to Control Panel > Displays > Settings. Set the computer resolution to the native projector resolution.

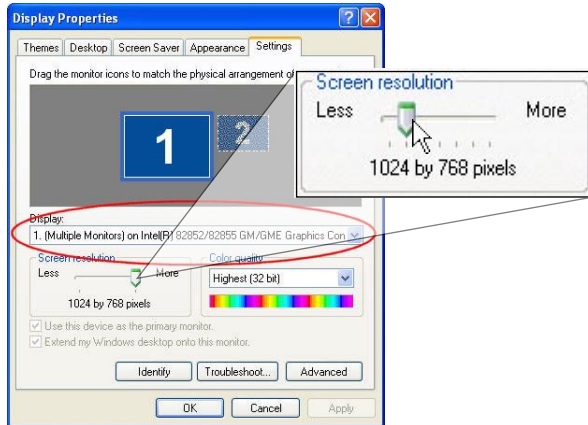


- 2** Click the Advanced button to view Advanced display properties.

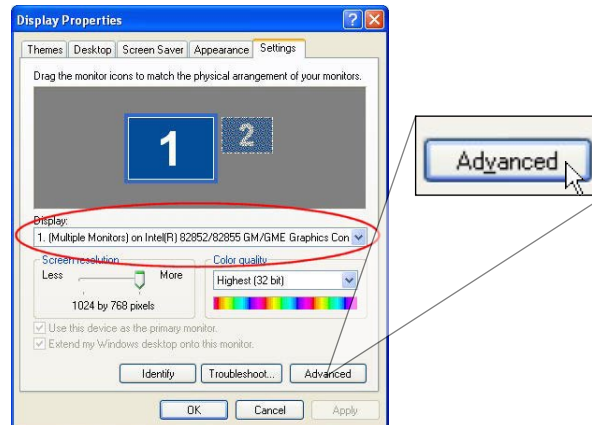

- 3** Click the Intel Extreme Graphics Tab. To go to the graphics controller properties, click Graphics Properties.

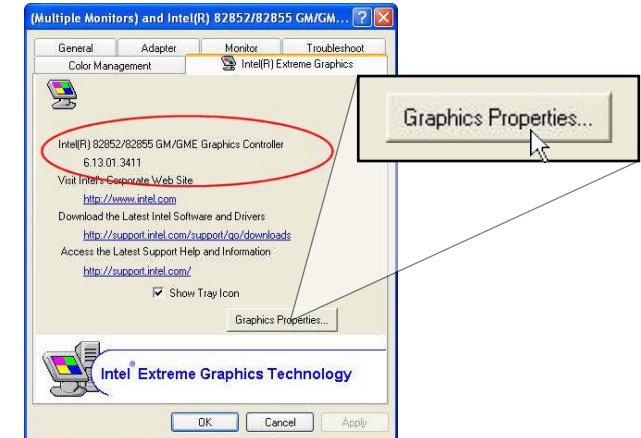


- 4** To activate Dual Display Clone, click the 'Intel(R) Dual Display Clone' icon on the Devices tab. Choose the Primary Device and the Secondary Device and click Apply.

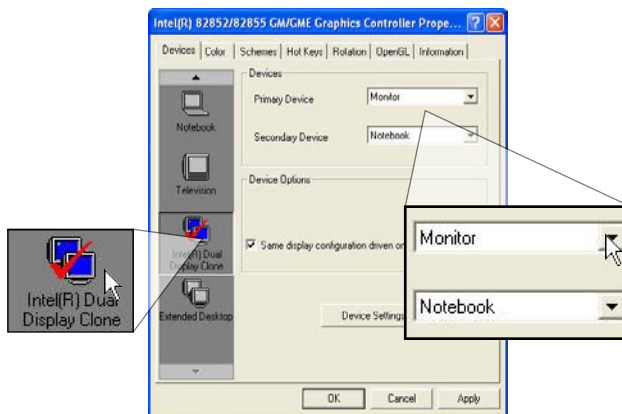

Primary Device is set to Monitor.
Secondary Device is set to Notebook.

- 5** Click Yes to accept the changes.

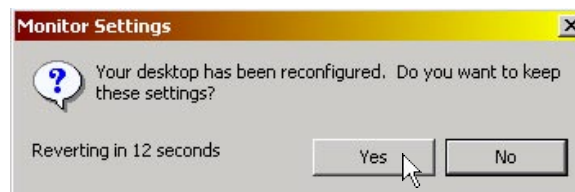

Note: If you do not click Yes or No, the settings will revert back to the previous settings.

- 6** The image appears on the laptop screen and the projector.

